CRAFTSMAN

610-24355

12 cu ft STEEL DUMP CART

READ AND FOLLOW ALL SAFETY RULES AND OPERATING INSTRUCTIONS BEFORE USING THIS EQUIPMENT

Sears Brands Management Corporation, Hoffman Estates, IL 60194 U.S.A

Assembled in the U.S.A. of domestic and imported components

3010455 - REV L 11/13

Safety Rules

This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

Read and understand all safety rules and operating instructions before using this tractor attachment.

Follow all safety rules and operating instructions provided by your vehicle's manufacturer when using attachment.

Never allow children or untrained persons to operate vehicle or attachment.

Do not exceed the vehicle manufacturer's towed weight limit.

Reduce vehicle speed and allow extra stopping distance when towing heavy loads.

Reduce vehicle speed and towed weight when operating on slopes.

Operate up and down slopes, never across the face of slopes.

Do not carry passengers on vehicle or attachment.

Avoid sudden turns or maneuvers.

Do not tow attachment on public roadways.

Do not remove warning decals from product.

Check product for worn, loose, or damaged parts before each use. If any damage is present, repair the product before using.

Check product for loose or missing fasteners before each use. Tighten or replace fasteners as needed before using.

Do not exceed vehicle speed of 6 miles per hour when towing Dump Cart.

Do not exceed Dump Cart rated weight capacity of 1000 pounds.

Carton Contents

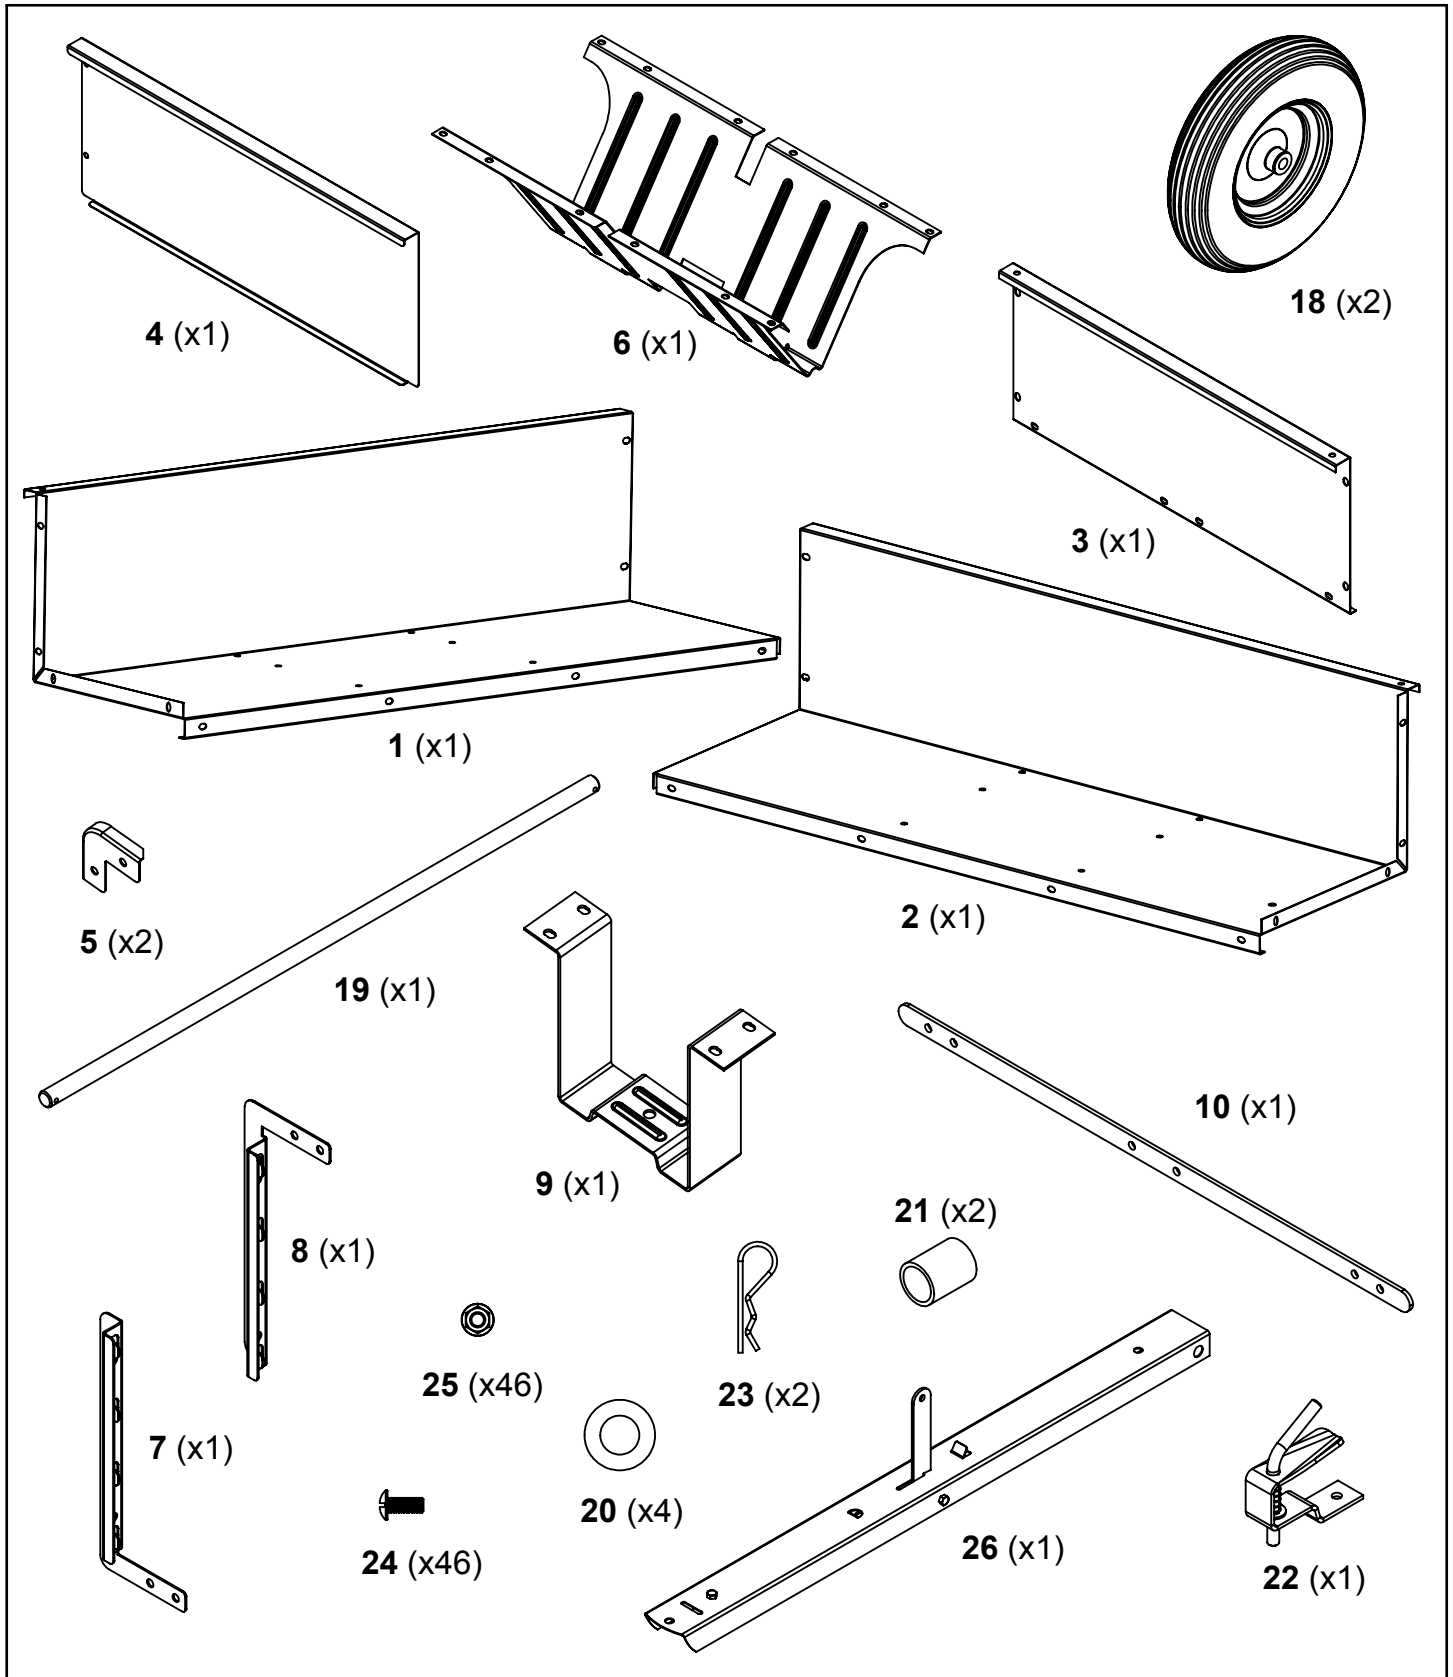

TOOLS REQUIRED FOR ASSEMBLY:

- Large Flat Screwdriver
- 1/2" Wrench or Socket
- Grease Gun

Assembly Instructions

1 Place body halves on a smooth, flat surface so they are square and fasten together with hardware as shown.

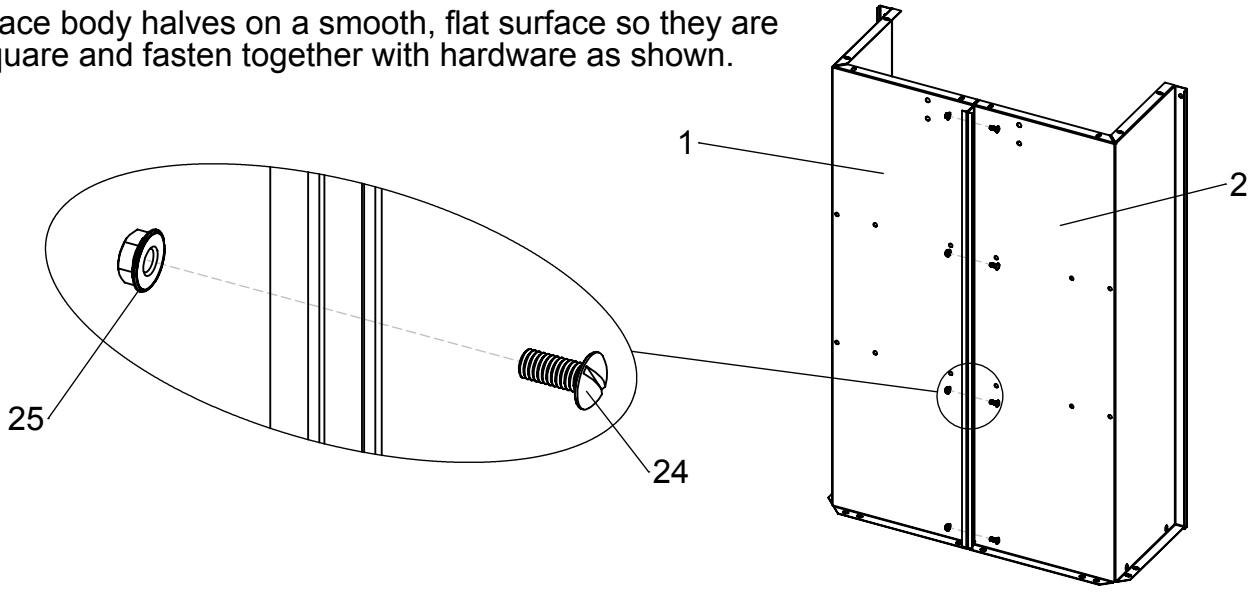

2 Attach front support to body and tighten with hardware as shown.

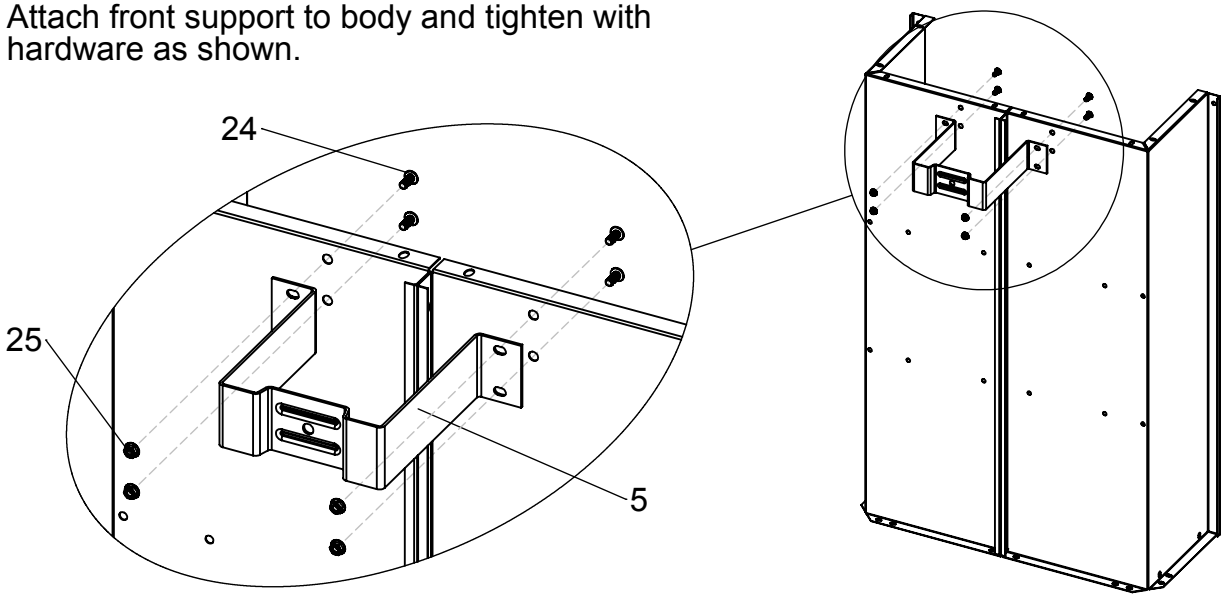

3 Attach undercarriage to body and tighten with hardware as shown.

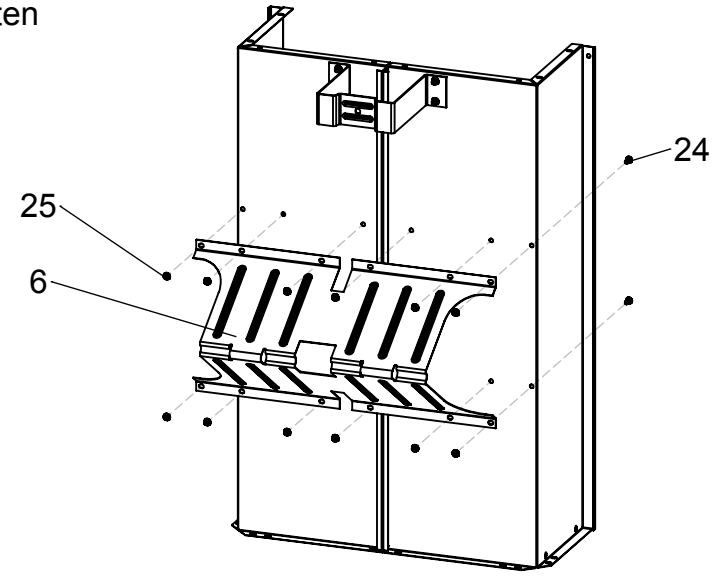

Assembly Instructions

4 Attach front gate to inside of body with supplied hardware as shown.

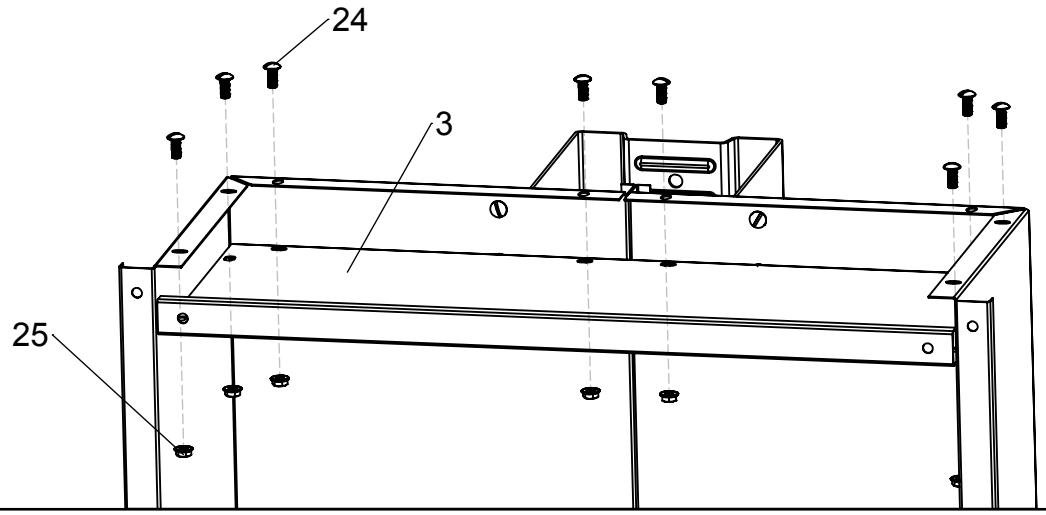

5 Attach corner bumpers to body of cart and tighten with hardware as shown.

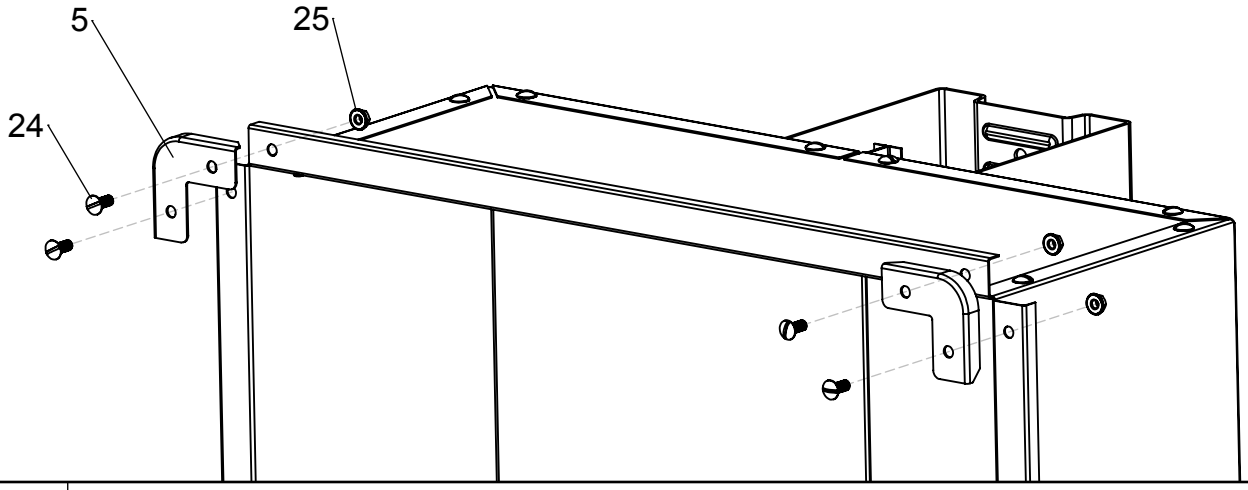

6 Insert axle into undercarriage halfway as shown.

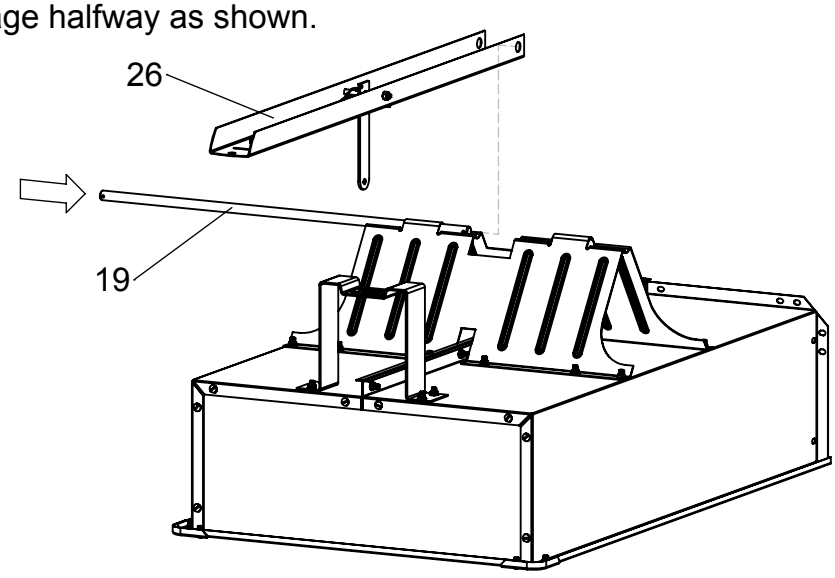

Assembly Instructions

7 Slide axle completely through undercarriage; be sure to catch the drawbar when sliding the axle. Align drawbar with the front support and press down to latch.

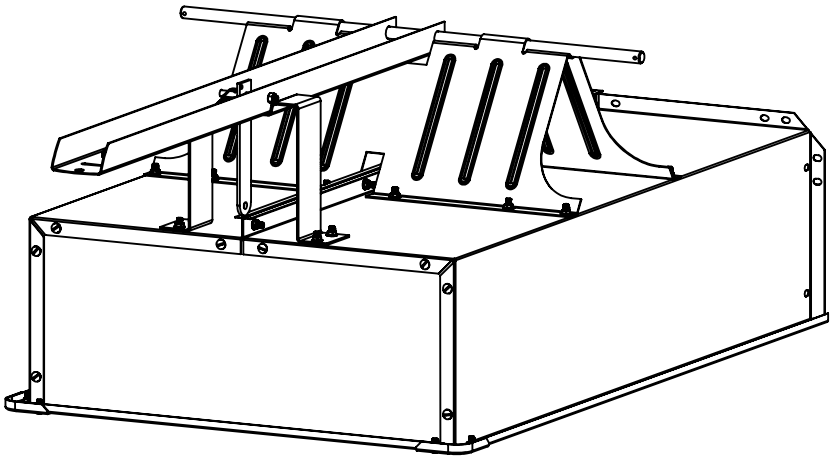

8 Slide washers, spacers, and wheels onto axle and secure with hairpins as shown.

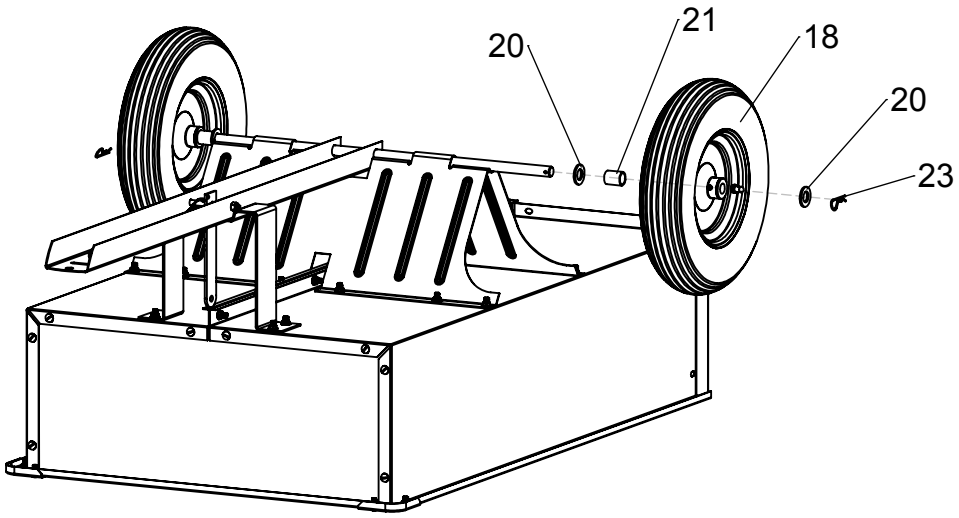

9 Attach the support bar to body behind flange loosely.

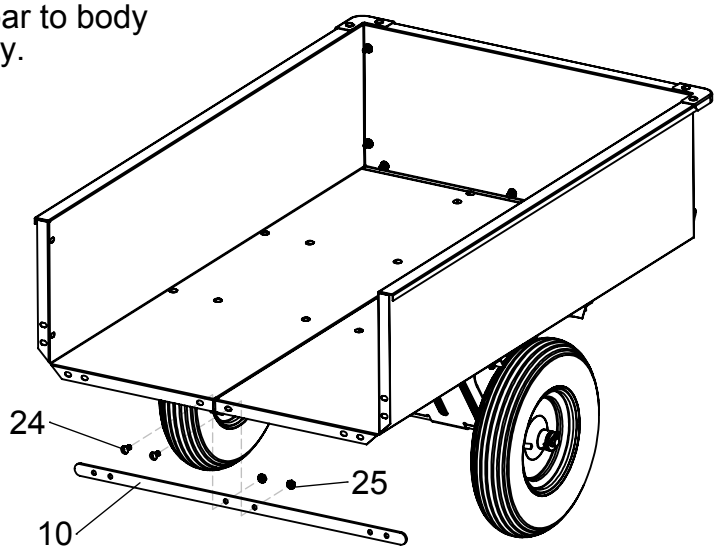

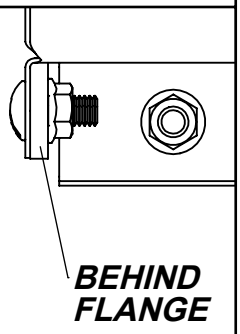

Assembly Instructions

10 Attach corner gussets to rear and sides of body and tighten with hardware as shown.

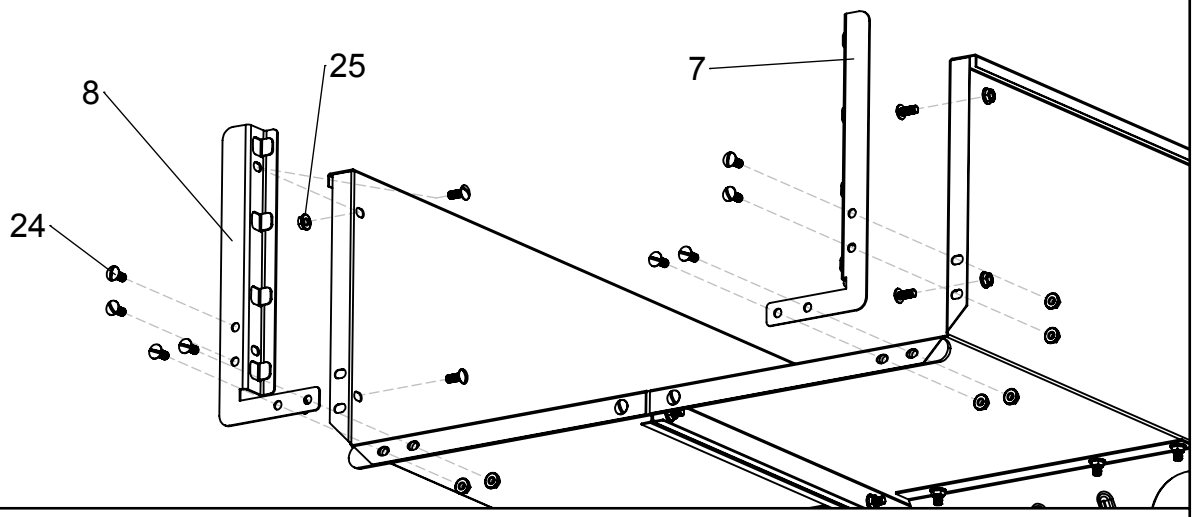

11 Attach tailgate to body as shown. No hardware is required, tailgate should move freely up or down.

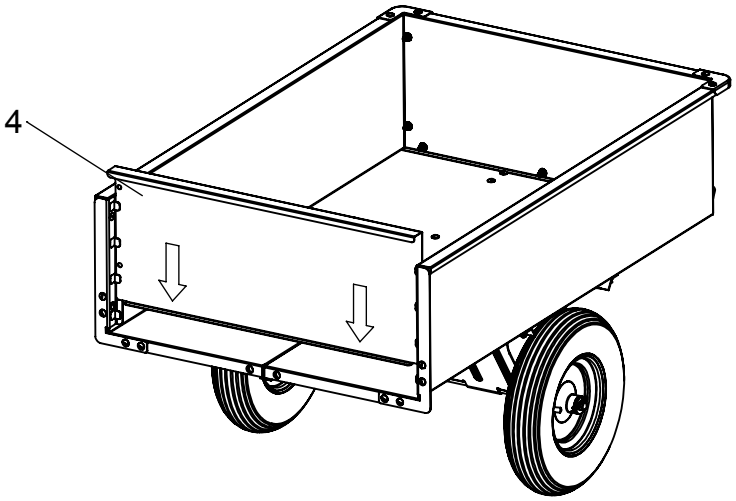

12 Install spring loaded hitch bracket to attachment vehicle.

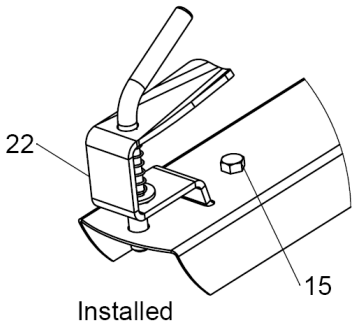

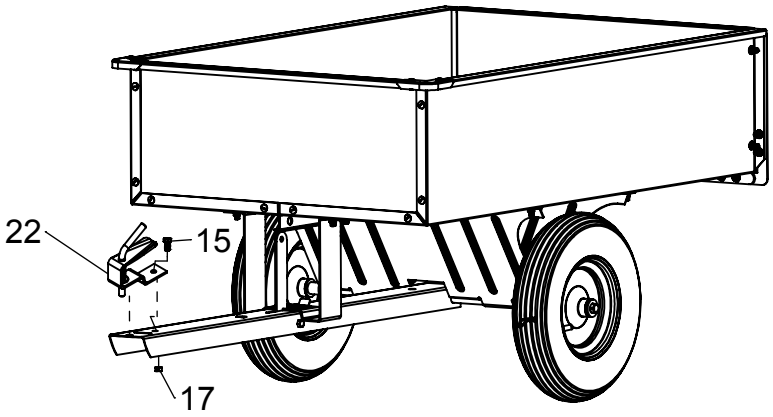

Operating Instructions

Before Using Dump Cart:

1. Apply grease to wheels using grease gun until grease can be seen squeezing out from both sides of the wheel.
2. Check tire pressure and inflate to 30 psi if needed.
3. Read all Safety Rules found on page 1.

How to Use Dump Cart:

1. Attach Dump Cart to your tractor using the supplied hitch pin.
2. Do not exceed 1,000 pounds when loading material into the cart body.
3. Distribute the weight of the load as evenly as possible in the cart body for best handling.
4. When hauling heavy loads, verify that your vehicle has adequate towing and braking capacity.
5. Do not exceed 6 miles per hour when towing Dump Cart.

How to Empty Dump Cart:

1. Pull hand lever forward to release the latch mechanism.
2. Angle cart body as desired to guide the material to preferred location.
3. Lower the body and guide the latch into the drawbar and relatch.

Periodic Maintenance:

- Tighten fasteners as needed before each use
- Check tire pressure before each use
- Grease wheels annually

Craftsman Two Year Limited Warranty

FOR TWO YEARS from the date of purchase, this product is warranted against defects in material and workmanship. With proof of purchase, a defective product will be repaired or replaced at option of seller. This warranty does not cover tires and wheels, which are expendable parts that can wear out from normal use within the warranty period.

This warranty does not cover:

- Repairs necessary because of operator abuse or negligence.
- Equipment used for commercial or rental purposes.
- Paint that is worn or faded due to normal use or exposure.

To arrange for product repair call 1-800-652-2321, or return this product to place of purchase for replacement.

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. This warranty applies only while this product is in use in the United States.

Sears Brands Management Corporation, Hoffman Estates, IL 60194

In the space below record the purchase date of your Dump Cart.

Model Number **610-24355**

Purchase Date _____

Keep this Owner's Manual and your receipt in a safe place for future reference.

After the two year warranty period all replacement parts may be ordered by calling ***1-800-652-2321***.

When ordering replacement parts, always give the following information:

- Product **12 cu ft STEEL DUMP CART**
- Model Number **610-24355**
- Part Number _____
- Part Description _____

Repair Parts

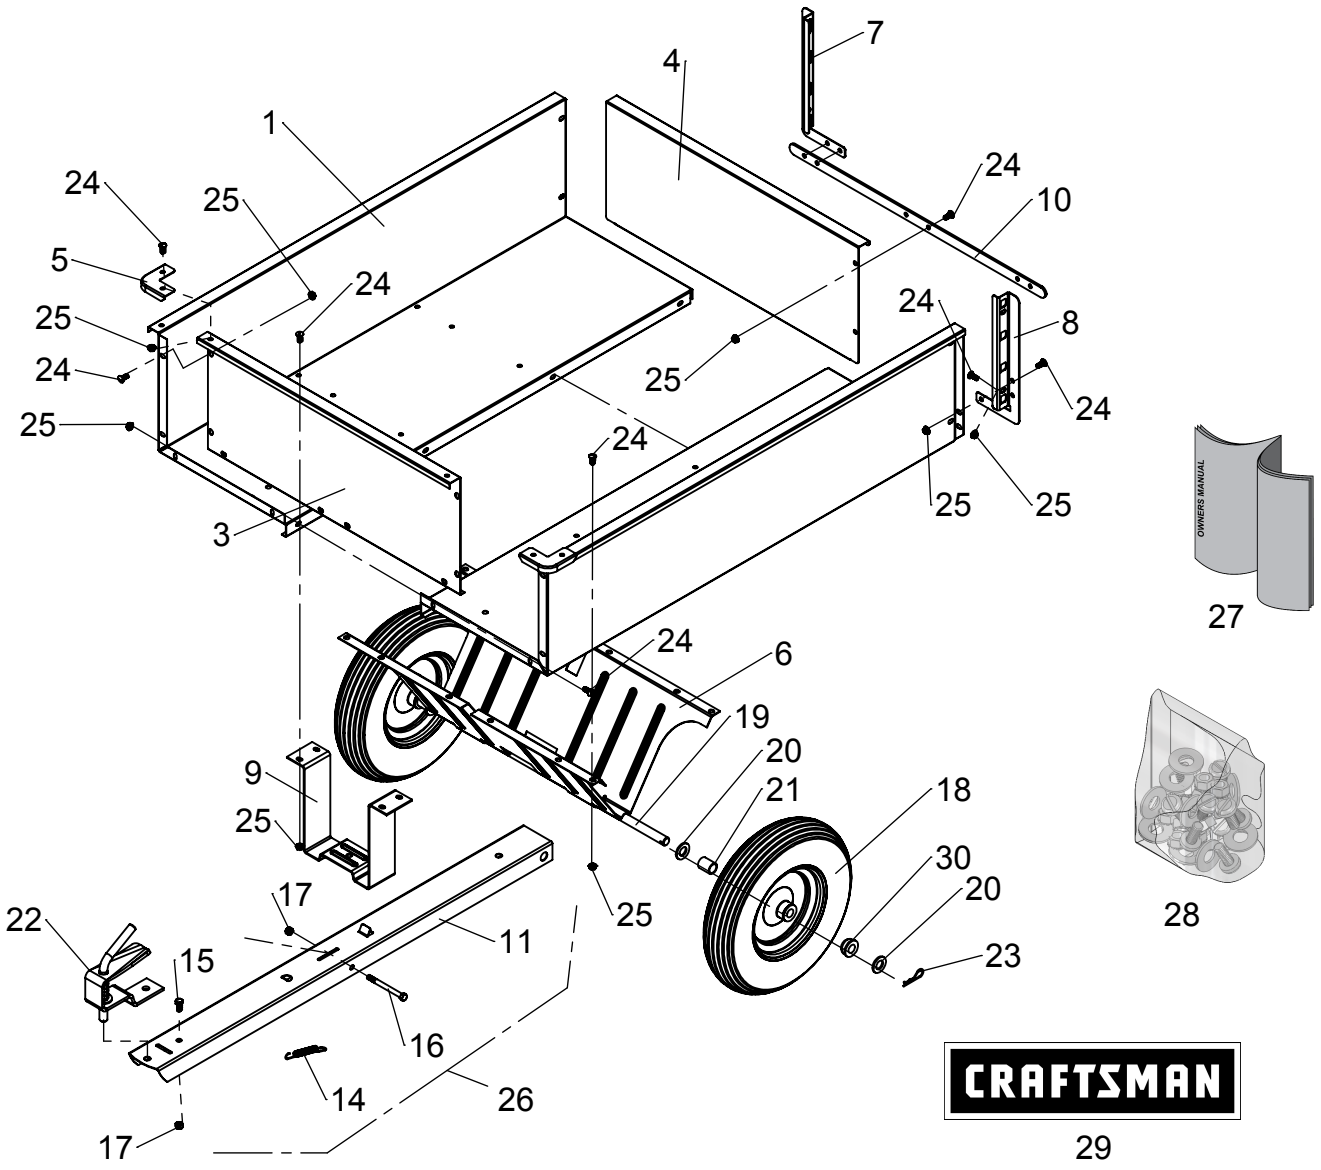

ITEM	PART NO	DESCRIPTION	QTY	ITEM	PART NO	DESCRIPTION	QTY
1	401011	BODY HALF, RIGHT	1	17	300061	HEX NUT, 3/8-16 C-LOCK	2
2	401021	BODY HALF, LEFT	1	18	6000293	WHEEL, (includes bushings)	2
3	401031	GATE, FRONT	1	19	300001	AXLE	1
4	401041	TAILGATE	1	20	3000721	3/4" SAE WASHER	4
5	401051	CORNER GUARD	2	21	6000105	SPACER 3/4" X 1.250"	2
6	401061	UNDERCARRIAGE	1	22	6000612	SPRING LOADED HITCH BRACKET	1
7	401071	RETAINER GATE, RIGHT	1	23	300084	HAIRPIN COTTER	2
8	401081	RETAINER GATE, LEFT	1	24	300054	TRUSS HD SCREW, 5/16-18 X 3/4"	46
9	401091	SUPPORT, FRONT	1	25	6000418	5/16 - 18 SPINNER GRIP NUT	46
10	401131	BAR SUPPORT, REAR	1	26	501012	HITCH, DRAWBAR ASSEMBLY	1
11	401101	DRAWBAR, FORMED	1	27	3010455	OWNERS MANUAL	1
14	300131	SPRING, LATCH	1	28	3010355	HARDWARE BOLT BAG	1
15	300052	HEX BOLT, 3/8-16 X 3/4"	1	29	6002856	DECAL, CRAFTSMAN	1
16	300053	HEX BOLT, 3/8-16 X 4"	1	30	6000809	KIT, 3/4" WHEEL BUSHINGS	1

Notes

CRAFTSMAN®

Product questions or problems?

1-888-331-4569

Customer Care Hot Line

Get answers to questions, troubleshoot problems, order parts, or schedule repair service.

Para respuestas a preguntas o problemas, y ordenar piezas o pedir servicio para la reparación de su equipo.

To help us help you, register your product at www.craftsman.com/registration

Para poderte ayudar mejor, registra tu producto en www.craftsman.com/registration

---

Join the Craftsman Club today!

CRAFTSMAN® CLUB

www.craftsman.com/signup

Receive exclusive member benefits including special pricing and offers, project sharing, expert advice, and SHOP YOUR WAY REWARDS!

Como miembro exclusivo, recibe diversos beneficios como ofertas, precios especiales, proyectos nuevos, consejos de expertos y nuestro programa de puntos SHOP YOUR WAY REWARDS!

® Registered Trademark / ™ Trademark of KCD IP, LLC in the United States, or Sears Brands, LLC in other countries
® Marca Registrada / ™ Marca de Fábrica de KCD IP, LLC en Estados Unidos, o Sears Brands, LLC in otros países